

Antennenumschalter D-SUB25 J6		Flachbandkabel	Penelope D-SUB25 J6		Flachbandkabel	100W_PA Pfostenstecker J10		PowerSDR PennyCtrl
	Signalname			Signalname			Signalname	
13	PTT	1	13	PTTOUT	1	PTT_OUT		
25	+12V	2	25	OCREF	2	n.c.		
12		3	12	OC6	3	OC6/PIN7	PIN7	
24	6m-LNA	4	24	OC5	4	OC5/PIN6	PIN6	
11		5	11	OC4	5	OC4/PIN5	PIN5	
23		6	23	OC3	6	OC3/PIN4	PIN4	
10		7	10	OC2	7	OC2/PIN3	PIN3	
22		8	22	OC1	8	OC1/PIN2	PIN2	
9		9	9	OC0	9	OC0/PIN1	PIN1	
21	GND	10	21	AGND	10	GND		
8	GND	11	8	GND	11	GND		
20		12	20	FWD PWR	12	FWD		
7		13	7	REV PWR	13	REV		
19		14	19	AIN3	14	AIN3		
6		15	6	AIN4	15	AIN4		
18		16	18	PWM0	16	n.c.		
5		17	5	PWM1				
17	GND	18	17	GND				
4		19	4	PWM2				
16		20	16	LHPOUT				
3		21	3	RHPOUT				
15		22	15	RLINEIN				
2		23	2	LLINEIN				
14		24	14	GND				
1		25	1	PTTIN				
26	GND	connector case	26	AGND				
27	GND	connector case	27	AGND				

rot=Quelle red=source